

OPERATOR'S MANUAL FOR LIGHT TRUCK SERIES

The 1st Edition

Introduction

This Operator's Manual details the operation methods, regular maintenance and vehicle maintenance information about light trucks, as well as relevant safety regulations to be observed in vehicle application.

Please read this manual thoroughly prior to your first driving.

As for details about those assemblies, modified components or additional devices not produced by SINOTRUK, please refer to documents provided by relevant manufacturers.

For this light truck series has a variety of models, some vehicle pictures in this manual may be slightly different from those of your vehicle. Those pictures are only representative examples. Our company reserves the right of making proper change of vehicle appearance, configuration or technical features; therefore, we shall not be responsible for any claim arisen from change of data, illustration or text in this manual.

The Operator's Manual, Maintenance Records and relevant instruction manuals for additional devices and so on are an integral part of the vehicle, so please keep them on your truck properly for available at any time.

Wish you a safe, cozy and happy journey!

Vehicle Nameplate

The vehicle nameplate is located on the upper part of pillar at the front passenger side. Data about vehicle model, main mass parameters and engine model and so on are indicated on the nameplate.

VIN is stamped on both the outside of right side member web near the front axle centerline and the vehicle nameplate.

Please verify whether the VIN is in conformity with the certificate.

Data marked on the engine nameplate include: engine model, rated power/speed, manufacture serial number, emission standard and etc.

The engine nameplate is fixed on the engine cylinder head cover or the intake pipe and its manufacture serial number is also stamped on the cylinder block.

www.howotruck6.com
WhatsApp: 0086 188 0566 9888

Door Operation

Belt	101	Clutch Control System.....	101
Fuel System	101	Transmission.....	101
Air Filter	101	Front Axle	101
Electrical System	101	Drive Axle.....	101
Lighting	101	Vehicle Maintenance.....	101
Vehicle Cleaning and Maintenance.....	101	Chapter VI Safety and Environmental Protection	101
Chapter V Vehicle Maintenance	101	Safety Instruction.....	101
Steering System	101	Environmental Protection	101
Engine.....	101		

www.howotrucks.com
WhatsApp: 0086 188 2856 3883

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

Chapter I Vehicle Operation

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

##

Power Window (at the Front Passenger Side)


The window control button ① at the front passenger side is only for controlling the window at the front passenger side. Its function is the same as that at the driver side.

When the window control buttons at both sides are pressed simultaneously, the command from the driver side shall be executed.



Warning!

- Be careful to protect yourself from injury during adjustment!
- Prevent any person from being clamped during closing window.

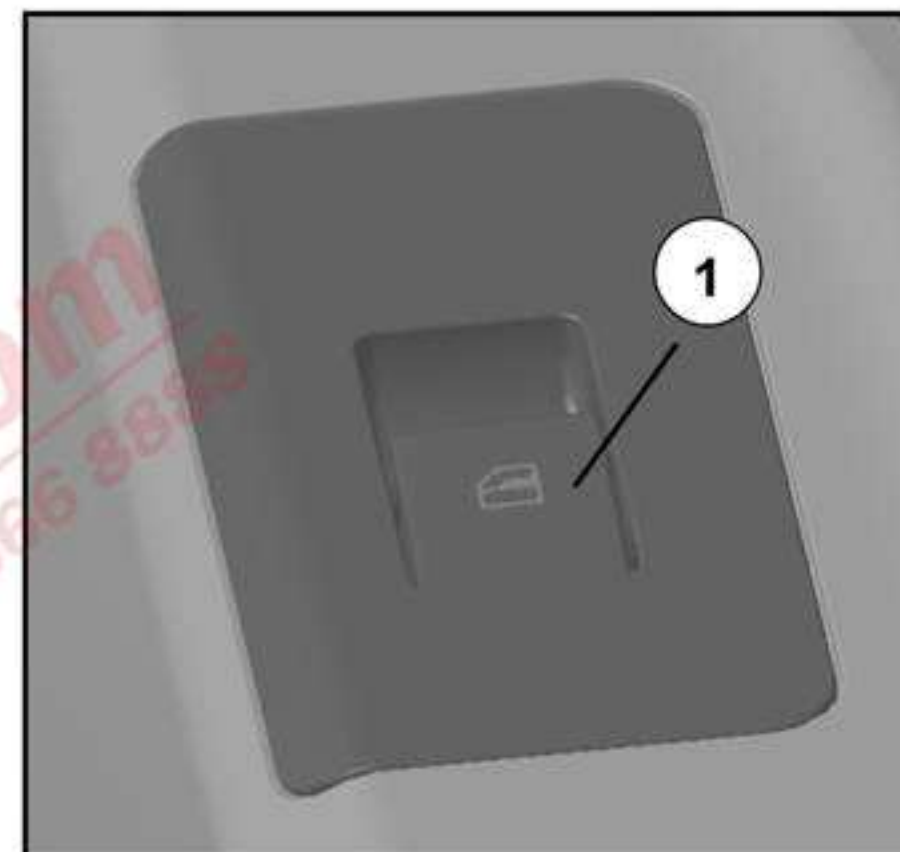

Seat Adjustment

Dashboard

- 1 Engine tachometer: For displaying the engine speed.
- 2 Detector and alarm lamp panel: For displaying symbols of various detector lamps and alarm lamps.
- 3 Speedometer: For displaying vehicle speed.
- 4 Button: For resetting trip mileage.
- 5 Driver's display screen:
 - ① For displaying engine coolant temperature.
 - ② For displaying fuel tank level.
 - ③ For displaying the air pressure of rear axle brake circuit.
 - ④ For displaying the air pressure of front axle brake circuit.
 - ⑤ For displaying the accumulated and total mileage.

Dashboard

Driver's Display Screen

Ignition Switch

Brake System

